


# INSTALLATION INSTRUCTIONS


Metal fixing bracket for simple pre-wiring of Radiant single bar towel rails. If installing on a brick wall, first install a suitable conduit from the ceiling to the position of the lowest towel rail. Ensure that the wiring holes in the bracket are positioned directly over the conduit. Mark the desired spacing and pre-drill holes in the

conduit prior to fixing the bar in position on the wall. If installing on a timber or metal framed stud wall, a conduit is not essential. The transformer should be located as close to the top of the conduit as possible  
 NOTE: Use a spirit level or laser to ensure the bar is perfectly vertical when installed.

## BRACKET SPECIFICATIONS

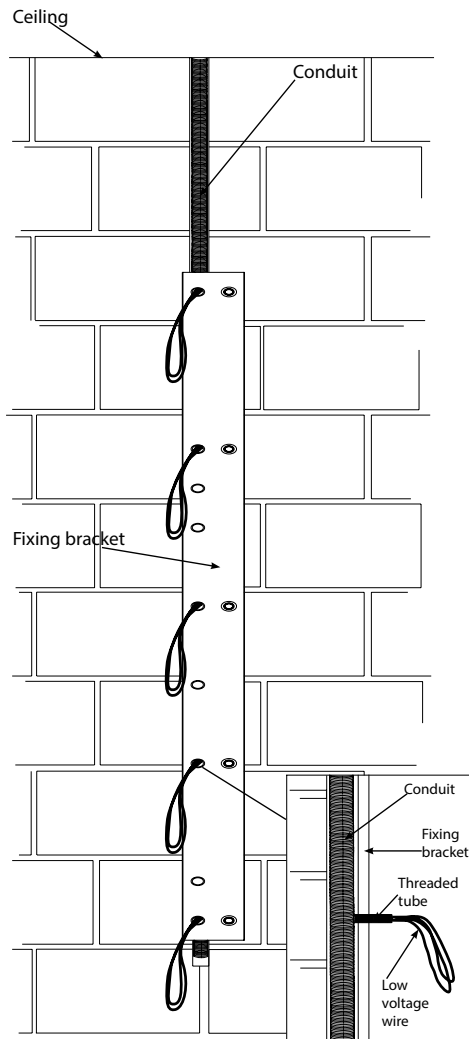

## FIXING BRACKET OPTIONS

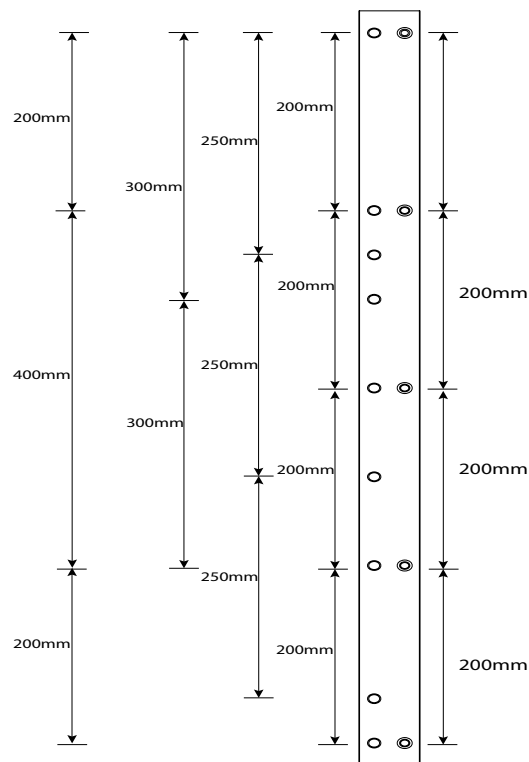

- Option 1: 2, 3, 4 or 5 rails at 200mm intervals (centre to centre)
- Option 2: 2, 3 or 4 rails at 250mm intervals (centre to centre)
- Option 3: 2 or 3 rails at 300mm intervals (centre to centre)
- Option 4: 2 + 2 rails at 200mm intervals with a 400mm gap (centre to centre)

Note: If more than 5 towel rails are being installed you will require a second fixing bracket and transformer.